


Calvert USA, Inc. Attic Stairs

Instruction for installation of optional insulation panel for
folding Calvert Attic Stairs™

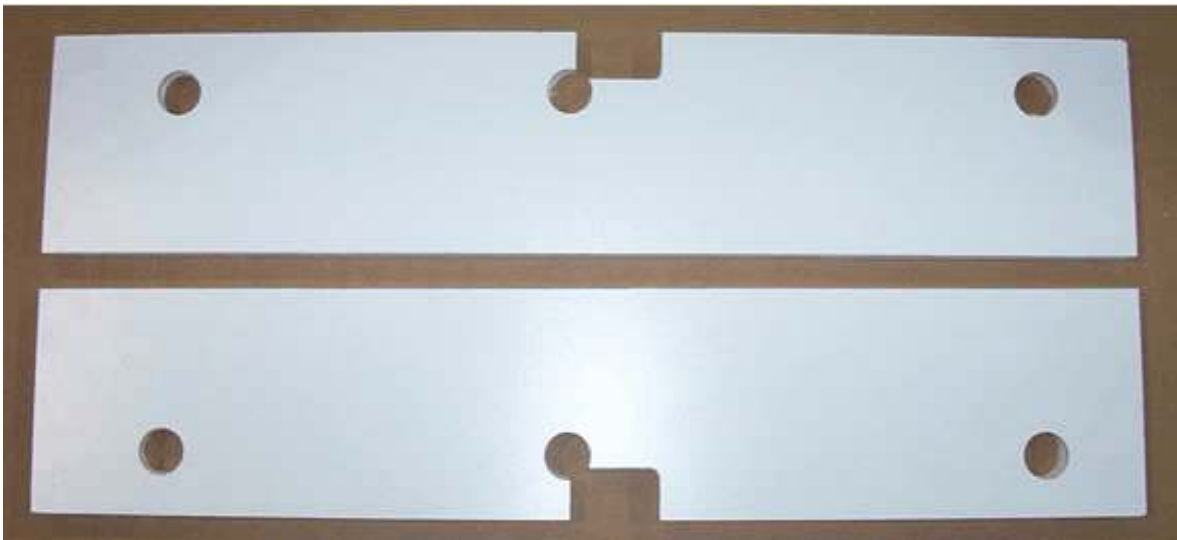

Calvert USA, Inc., P.O. Box 841, Solomons, MD 20688,
Tel.866-477-8455, (410) 326-8455, www.calvertusa.com

Read the entire instructions before starting. Optional insulating panel can be installed before or after the installation of the attic stairs in the ceiling.

Tools needed: Long phillips screwdriver or electric drill/screwdriver with 12" to 14" bit extension.

Step 1. Remove the ladder from the cover door. Save the screws.



Tip:

If you have not installed the attic stairs unit in the ceiling yet, you can proceed with the frame and cover door unit installation with the ladder removed. Follow the attic stairs installation instructions to install the door and frame unit. Install the optional insulating panel and ladder later from the attic. When installation of the frame and cover door is complete, proceed to the next step.

Warning: The door latch is not strong enough to support excessive weight or pressure. Do not push against, lean over, or support yourself against the cover door.

Step 2. Lay the optional insulating panel on the cover door. Align the openings in the insulation panel with the screw holes in the cover door. Lay the ladder back on the cover, and guide the metal brackets through the holes in the insulating panel.

Step 3. Re-attach the ladder, and push the insulation panel sections together. Use the supplied wood screws and drive them through the foam panel into the cover door. Use two or three screws to attach each section about 6" from the edge of the foam panel. Exact attachment location is not critical; do not over tighten the screws.

The installation is complete.

Calvert USA, Inc., P.O. Box 841, Solomons, MD 20688,
Tel.866-477-8455, (410) 326-8455, www.calvertusa.com